


1. POWER REQUIREMENTS

The Telephone Amplifier requires two AAA batteries (alkaline-type recommended). Install the batteries in the battery box before using.

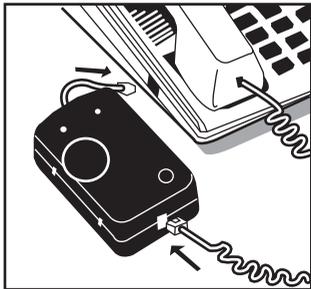

IMPORTANCE:

- A) Always disconnect the Telephone Amplifier from the telephone line before replacing the battery!
- B) If the batteries are 'dead' (or no batteries installed in battery box) the Telephone Amplifier and Telephone will not work.
- C) Installation
 - a. Remove the handset cord from the telephone base and insert into the socket at the bottom (marked 'handset') of the Telephone Amplifier.
 - b. Insert one end of the attached short cord into the Telephone Amplifier socket at the top of the unit (marked 'telephone').
 - c. Insert the other end of the short cord into the handset socket located in the base of the telephone.

2. SWITCH KEY

For most of telephones, keep both the Switch Keys at the original position. But for some types of telephones, you should change the position of both Switch Keys to the other side. You should make a call after installation. If you can not hear incoming voice or your party can not hear your voice after install correctly, then you need make the change.

Note: Please keep both Switch Keys at the same side!

3. ON/OFF BUTTON AND INDICATOR

The handset's incoming voice should be normal while the On/Off is up. Once the On/Off button is pressed down, the incoming volume will increase up to 30 dB+ according to the degree of the volume knob. The indicator light will illuminate while the button down. You should press the button again to release it after hang up.

Note: Please make sure the indicator light is off while hang up.

4. VOLUME CONTROL

The volume level is controlled by the volume knob located on the right side of the Telephone Amplifier. The volume of handset will increase when you turn it clockwise. Please adjust the volume to your satisfied listening level for you by turn the knob slowly.

5. BATTERY LIFE

The battery life will depend on your usage, the volume setting and the type of batteries installed. If the unit is no effect on volume amplifying, please change the batteries.

6. TROUBLE SHOOTING

The Telephone Amplifier is designed for trouble free operation. However, if any problem arises in using, disconnect the Telephone Amplifier from the telephone. Re-connect the handset to the telephone. If the problem disappears, then the problem may lie within your Telephone Amplifier.

Reinstall the Telephone Amplifier:

1. Ensure each cord is correctly installed.
2. Ensure the Switch Keys is set to the correct position.
3. If the handset is still dead, the battery may be incorrectly installed or need replacing.

Krown Manufacturing, Inc.

3408 Indale Road, Fort Worth, TX 76116

Voice: (817) 738-2485 E-mail: info@KrownMfg.com
TTY: (817) 738-8993 Web Site: www.KrownMfg.com
Fax: (817) 738-1970