


Wireless Doorbell and Call Alert Kit

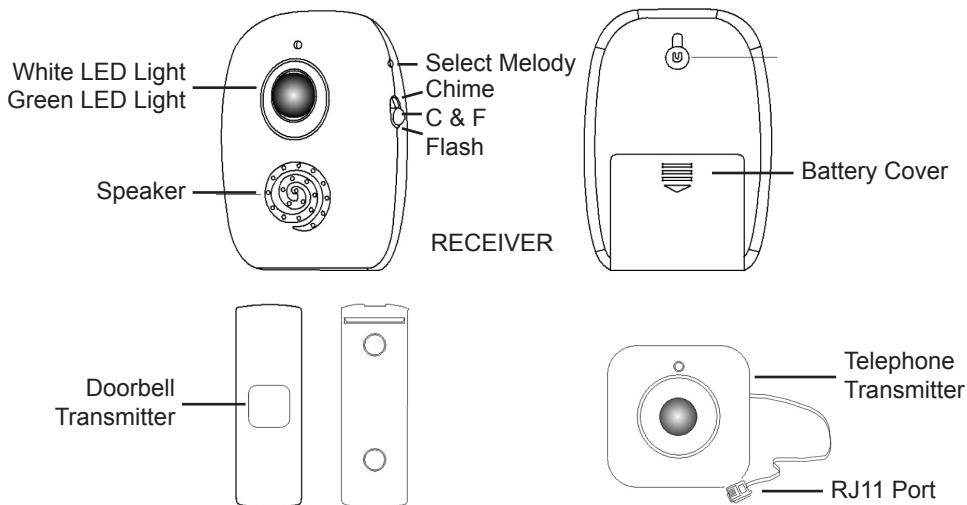

1. Open doorbell transmitter with screwdriver; Remove the battery's insulating piece; Close battery cover.
2. Insert RJ 11 port into telephone wall jack.
3. Install 3pcs x AAA batteries in receiver.
4. Three Modes:
 - 1) "Chime" mode – receiver(s) will chime when the doorbell is pressed or with incoming call.
 - 2) "Flash" mode – when the doorbell is pressed the receiver(s) will flash a white LED light for 20 seconds; With an incoming call the receiver(s) will flash a green LED light for 20 seconds.
 - 3) "C & F" mode – receiver(s) will chime when the doorbell is pressed and flash a white LED for 20s; With an incoming call the receiver(s) will chime and flash a green LED for 20s
5. Select Melody – Press button to change melodies. Unit has 18 optional melodies to choose from.

Rated Voltage: 4.5V Range: ≤390 feet in an open area
 Rated Power: ≤5W Receiver: 3pcs x AAA batteries x 2
 Frequency: 433MHz Doorbell Transmitter: 1pcs x CR2032 button cell
 Doorbell IP Rated (Doorbell Transmitter): IP44
 Installation Mounted with double-sided tape or screws. (Incl.)

