



INSTRUCTION MANUAL

Model Krown Visual VibeAlert : LCD Shaker Alarm Clock with USB Charging port (V3.1)


Front View

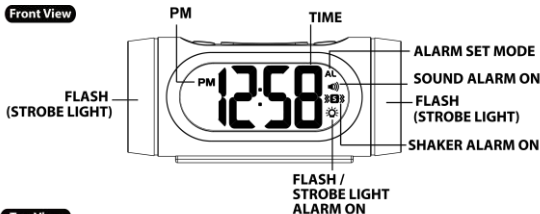


Top View

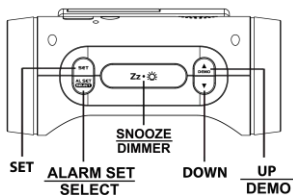

Bottom View

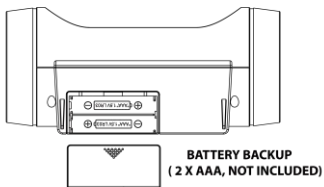

Back View

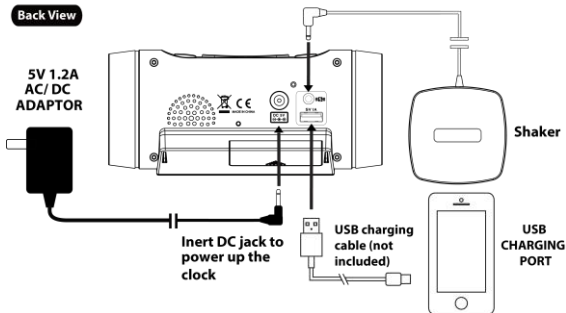

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

INSTALLATION

Plug the AC/DC adaptor into an AC household outlet, and then plug the DC jack into the back of the unit.

BACKUP BATTERY INSTALLATION

Your clock requires 2 x AAA battery (not included) to provide backup power to the clock in the event of a temporary power interruption.

1. Place your unit face down on a flat surface.
2. Slide and remove the battery cover at the bottom of your unit.
3. Insert 2 x AAA battery into the battery compartment by observing the correct "+" and "-" polarity
4. Replace the battery cover.

Check the battery condition after one year, replacing the old battery if necessary. A leaking battery can damage your clock.

TO SET TIME, 12/24 HR AND THE SNOOZE DURATION




1. Press **SET** once, the hour digits "12" flash. Press ▲ or ▼ to set the time in hours (hold ▲ or ▼ to advance rapidly).
2. Press **SET** again, the minute digits "00" flash. Press ▲ or ▼ to set the time in minutes. (hold ▲ or ▼ to advance rapidly).
3. Press **SET** again, the display shows "12Hr" and flashes. Press ▲ or ▼ to select "12Hr" or "24Hr" time format.

If "12Hr" is selected, the **PM** will appear on the left side to indicate the afternoon time; there is no **AM** indicator.

4. Press **SET** again, the display shows "05" and flashes. Press ▲ or ▼ to select your snooze time from 5 to 60 minutes.
5. Press **SET** again or if no key is pressed for approximately 10 seconds the clock will exit the setting mode.

TO SET THE ALARM (default at 6:00 AM)

1. Press and hold **AL SET / SELECT**, the **AL** appears and the alarm's hour digit flash. Press ▲ or ▼ to set the alarm in hours. (hold ▲ or ▼ to advance rapidly).
2. Press **AL SET / SELECT** once again, the alarm's minute digit flash. Press ▲ or ▼ to set the alarm in minutes. (hold ▲ or ▼ to advance rapidly).

- Press **AL SET / SELECT** once again, LCD displays "**HI**" (vibration at HI level) and  flash, press **▲** or **▼** to select:-
HI (strong vibration level)
LO (soft vibration level)
- Press **AL SET / SELECT** once again, LCD displays "**F1**" and  flash, press **▲** or **▼** to select the alarm tone (frequency):-
F1 (low tone, 800 Hz)
F2 (mid tone, 1 KHz)
F3 (high tone, 1.5 KHz)
- Press **AL SET / SELECT** once again, LCD displays "**L1**" (low) and  flash, press **▲** or **▼** to select the alarm sound level :-
L1 (low)
L2 (medium)
L3 (high)
- Press **AL SET / SELECT** once or if no key is pressed for approximately 10 seconds the clock will exit the alarm setting mode.

TO SELECT THE ALARM MODE

At normal time display mode, press **AL SET / SELECT** one at a time to activate the alarm(s), the corresponding alarm indicator(s) on the right side of the time display will be on:-



: only shaker alarm is activated





: both sound and shaker alarm are activated



: both strobe light and shaker alarm are activated



: strobe light, sound and shaker alarm are activated

Press **AL SET / SELECT** once more to turn off all the alarms, all  and  alarm indicators disappear.


TO STOP AND RESET THE ALARM TO COME ON THE NEXT DAY

When the alarm is sounding, the corresponding alarm indicator flashes. Press **AL SET / SELECT** once to stop the alarm and reset it to come on the following day. After that, the corresponding alarm indicator stays on the display.


TO USE THE SNOOZE

When the alarm is sounding, press **Zz • ☀** once, the alarm will stop temporarily and the corresponding alarm indicator keeps flashing. Alarm will resume after the set snooze duration is over.

TO USE THE HI-LO-OFF DIMMER

There is a 3-level brightness control for the LCD display. Press **Zz**  to adjust the brightness (**HI / LO / OFF**) of the LCD display. This can only be done when the unit is not sounding.

TO USE DEMO

Press and hold  button 2 seconds will trigger the buzzer, stroke light and shaker .

TO CHARGE MOBILE PHONE WITH THE USB PORT

Connect the charging cable of your mobile phone to the A-type USB port at the back of the unit, then connect the other end to your mobile phone. The clock radio will charge the mobile phone automatically.

TROUBLE SHOOTING

If your clock displays irrelevant time or does not function properly, which may be caused by electrostatic discharge or other interference, unplug the DC jack to disconnect the AC power (and remove the backup battery), leave it for few minutes and then plug in the adaptor to repower your clock. The clock will be reset to default settings and you need to set it again.

CARE OF YOUR PRODUCT

1. Place your clock on a stable surface, away from sources of direct sunlight or excessive heat or moisture.
2. Protect your furniture when placing your unit on a natural wood and lacquered finish by using a cloth or protective material between the clock and the furniture.
3. Clean your unit with a soft cloth moistened only with mild soap and water. Stronger agents such as Benzene, thinner or similar chemicals can damage the surface of the unit. Make sure the unit is unplugged before cleaning.
4. If the unit is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the batteries.

SPECIFICATIONS

Alarm duration	1 hour
Snooze duration	5 to 60 minutes

Default settings:-

Time format	12 hour
Time	12:00
Alarm	6:00 (AM)
Alarm and shaker level	HI
Alarm sound frequency	F-1
Alarm sound level	L1 (low)
Snooze duration	05 (5 minutes)

Krown Visual VibeAlert IM

V3.1

20 Nov 2017



3408 Indale Road, Fort Worth, Texas 76116

Voice/TTY: (817)738-2485 Fax: (817)738-1970

Email: info@KrownMfg.com

Web Site: www.krownmfg.com