
Phone Flasher

Newly improved 180° dome cover and 10Cd ultra bright LED to guarantee you will not miss any call. Can be used anywhere in any phone system, video phone system and some PBX systems.

INSTALLATION INSTRUCTIONS

- 1. Unplug your phone from the wall jack.
- 2. Plug the PHONE FLASHER into the wall jack.
- 3. Plug your phone into PHONE FLASHER.

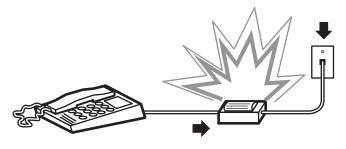



MADE IN CHINA

3408 Indale Road, Fort Worth, TX 76116 Voice/TTY: (817) 738-2485 or (817) 738-8993 Fax: (817) 738-1970 E-mail: sales@KrownMfg.com Web site: www.KrownMfg.com